

FITTING INSTRUCTIONS - ANTI ROLL BAR CLAMPS

The clamp, bolt, nyloc & washers are all stainless steel.

Sizes available 9/16,14mm 5/8,16mm 11/16,17.5mm 3/4,19mm 7/8,22.2mm diameters

Centralise the anti roll bar in its' bushes side to side

Place the clamp on the inner side of the mount on both sides

Push up against the isolator and tighten the clamp

For road cars the clamp should not be against the metal part of the holding bracket, if it is use an 'O' ring to separate

