

# SPITFIRE BJ ANTI ROLL BAR LINKS

## ASSEMBLY OPERATIONS

LH BS004LH IS OUR RH / OS

RH BS003RH IS OUR LH / NS

- 1) Remove nut on threaded end
- 2) Add 7/16 washer to Boss / threaded end & replace nut

